 



NOTES:
 1. Motors, electric flush valves, & solenoids are connected to controller via drive boards, relays, circuit breakers, & the transformer which are located inside electric controller box. See connection drawing for detailed wiring of components to controller.
 2. Motor must rotate counter clockwise from viewpoint for filters that contain a screen with area less than 5.0 sq. ft. (I.E. models LPF2-SP, 2-XLP, 3-LP, 3-SP, 4-LPE, 4-P & 6-P). Motor must rotate clockwise for all other filters.



REVISIONS				
REV	ZONE	DESCRIPTION	DATE	APPROVED
01	ALL	MOUNT SOLENOID DIRECTLY TO PISTON END	01/30/18	R. LAM

GB8 ELECTRIC CONTROLLER

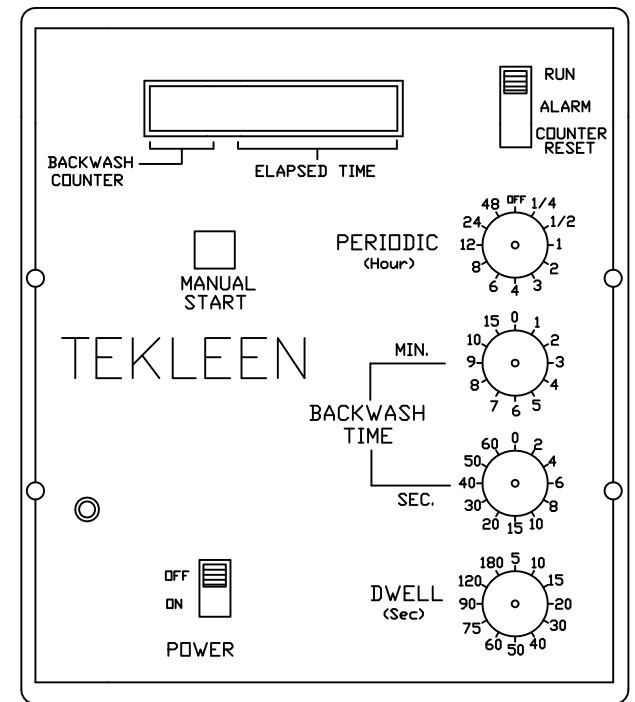

Y □ Y C 4 3 2 1 A M P D
 ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○ ○

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES		AUTOMATIC FILTERS, INC. 2672 S. LA CIENEGA BLVD. LOS ANGELES, CA 90034 (310) 839-2828 FAX (310) 839-6878		
DECIMALS .XX ± .05 .XXX ± .01		ANGULAR ± 0.5 DEG.		TITLE 3 LPF FILTERS IN PARALLEL WITH GB8 ELECTRIC CONTROLLER, ELECTRIC FLUSH VALVES, & 3-WAY SOLENOID VENT FOR PISTONS
DRAWN S. PERKINSON	DATE 07/18/14	SIZE A	DWG NO. WIRE-3LPFGB8-EFV-SOL-LAY-02	
CHECKED		REV 01		
DESIGN		NOT TO SCALE	SHEET 1 OF 1	